
HINKLEY

Fixture Mounting

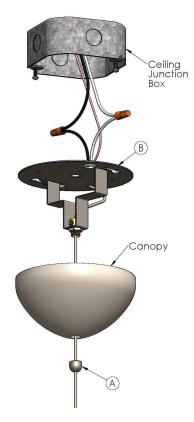

Fixture Adjustment

I.S. 35000 Mounting Instructions

Family: LOFT | Item No. FR35004 / FR35007 / FR35014 / FR35017

start here

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (IS18). TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITY FOR CODE REQUIREMENTS.

- 1. Find a clear area to work.
- 2. Unpack fixture from carton.
- 3. Carefully review instructions prior to assembly.

This fixture is designed to be directly mounted to a ceiling junction box with a 3-1/2" center to center mounting distance.

Fixture Mounting:

- 1. Make electrical connections according instructions on IS18.
- 2. Unthread Canopy Finial (A) and slide canopy down wire.
- 3. Keyhole slots in **Mounting Plate** (B) should fit over screws that came with the junction box. Turn mounting plate until the screws reach the end of the slot.
- 4. Tighten screws until snug.
- 5. Proceed to fixture adjustment instructions.

Fixture Adjustment:

- 6. Fixture is completely wired to the driver (**do not disconnect the braided wire from the driver**).
- 7. Using a flat bladed screw driver turn the set screw (C) in a counter clockwise direction until the braided wire moves freely.
- 8. Pull cable up and out until the desired fixture height is reached. Extra wire can be wrapped around the mounting bracket.
- 9. Slide canopy up the braided wire and lock in place using the canopy finial.
- 10. Save these instructions.

