

FR56562PCM, FR54342PCM, FR55452PCM

Bulbs: 60 W G9

ASSEMBLY INSTRUCTIONS


Assembly of this fixture will be accomplished by first installing the mounting strap to the junction box, making all necessary electrical connections, mounting the fixture to the wall and then installing the fixture glass.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.


STEP 1

- 1 Remove ball knob (c) from front of backplate (d) - See Drawing 1.
- 2 Remove retainer plate (a) from backplate (d).
- 3 Attach retainer plate (a) to junction box using two 8-32 screws (b).
- 4 Additional screws can be installed at points (e) for additional mounting support. Please use appropriate anchor for material the fixture is being mounted too.
- 5 Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet [FRIS 18] and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.
- 6 Slip holes (g) in backplate (d) over screws (f) on retainer plate (a).
- 7 Thread ball knobs (c) onto end of screws (f) and tighten to secure backplate to wall.

[DRAWING 1]

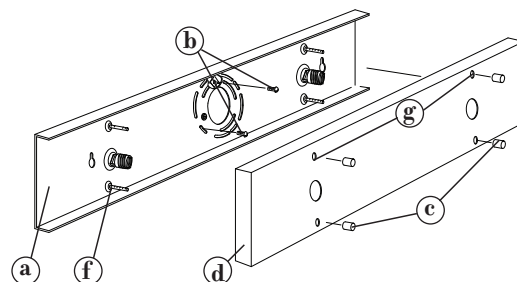

[DRAWING 2]

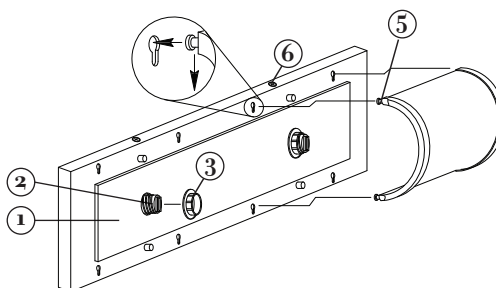

STEP 2

- 1 Install panel glass (1) on backplate by slipping it over the sockets (2) and threading on the socket rings (3). HAND TIGHTEN ONLY until snug. Over tightening using a tool could cause the glass to crack - See Drawing 2.
- 2 Fixture can now be lamped accordingly and thread bulb shield onto socket after lamping.
- 3 To attach decorative glass assembly, slip mounting knobs (5) into key slots (6) located on the backplate. After engaging all four of the knobs, gently pull down on the decorative glass assembly to lock them in the keyslot.



FREDRICK RAMOND

ESTABLISHED 1965

800.421.3517 WWW.FREDRICKRAMOND.COM

5.28.10