



# STRATUS

FR30407

Bulbs: 100W MED.

## ASSEMBLY INSTRUCTIONS

Assembly of this fixture will be accomplished by first determining the length of wire required, attaching the mounting strap to the junction box, making all necessary electrical connections, and then hanging the fixture from the ceiling.

**SAFETY WARNING:** Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.


### STEP 1

- 1 First it will be necessary to determine the height you want to hang your fixture. After this has been determined, to adjust the cord length unthread collar (1) from locking mechanism (2) of canopy assembly, and slip it down along the cord (3) - See Drawing 1.
- 2 The canopy (4) can now be slipped down the cord (3). This allows access to the mounting plate (5).
- 3 Slip mounting plate along wire until it is at the approximate location necessary to hang your fixture at the pre-determined height. Slip excess cord through hole (6) of mounting plate (4).
- 4 Thread screws (7) supplied into the corner of the junction box (j) several turns.
- 5 Now slip supply wires from junction box through large rectangular hole in mounting plate. Then slip screws (7) through keyhole slots (8) in mounting plate and twist plate until screws are at the end of the slot. Tighten screws (7) to secure mounting plate to junction box.

### STEP 2

- 1 Excess wire can now be trimmed off. Do Not remove wire from hole (6) in mounting plate. Follow wiring instructions [FRIS 18] provided to make all necessary wiring connections.
- 2 Now slip canopy (4) along cord (3) and up against the ceiling and hold in position.
- 3 Now slip collar (1) along cord (3) and thread onto locking mechanism (2) and tighten to secure cord and fixture.
- 4 Fixture is complete and can be lamped accordingly.

[DRAWING 1]

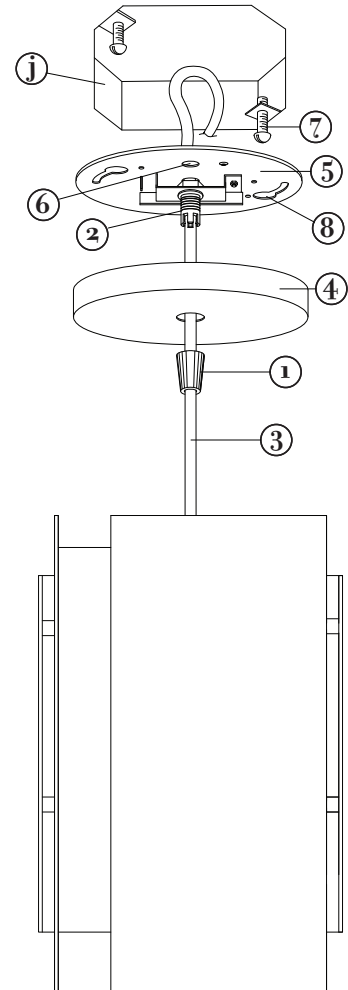

FREDRICK RAMOND

ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.  
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012  
toll free 800.446.5539 | phone 440.653.5500